


QUALITY ASSURANCE FORMWORK

Steps:

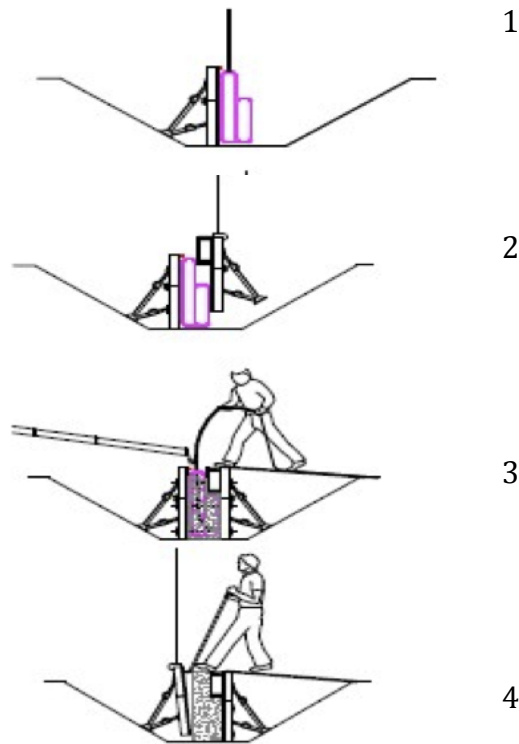

Stability

Length 110mm

Width 30mm

Reinforcement

Clean

Cover layer 30mm

Tolerance plus
minus 0,5

Toplevel

